



# ADJUSTING THE LEG PINS ON THE KENCO MULTILIFT FOR ATTAINING DESIRED WIDTH




**1** Determine width of object to be picked up

**2** Position the legs wider than the object being lifted.

**3**

LINE UP ANY OF THE FOUR HOLES ON THE LEG WITH THE SINGLE OUTER CORE HOLES AND INSERT THE PIN

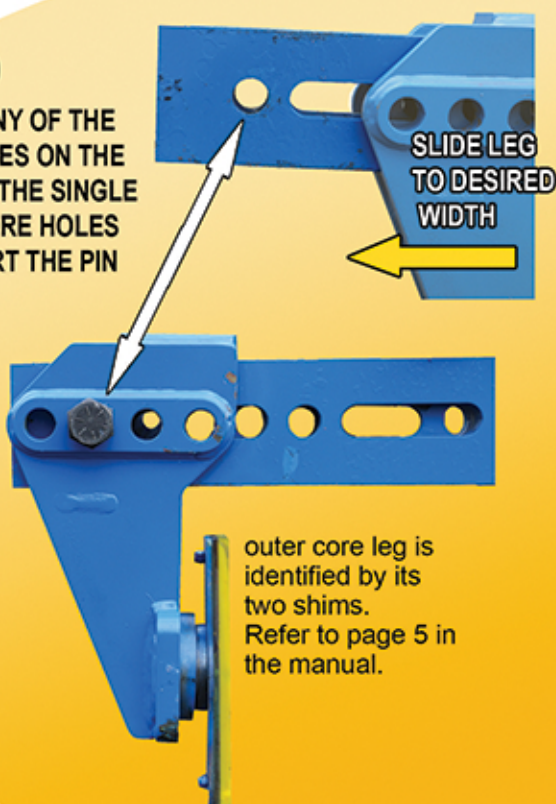

**4**

SLIDE LEG TO DESIRED WIDTH

LINE UP ANY OF THE FOUR HOLES ON THE LEG WITH A SINGLE HOLE (INSIDE A SLOT) OF THE INNER CORE AND INSERT THE PIN

inner core leg has one shim. Refer to page 5 in the manual.