

# **BIN BLOCK LIFTER**

## **BLK6K24T30**

**Operators Manual**  
**Conforms to ASME B 30.20, BTH-1**  
**Design Category B, Service Class 3**



170 State Route 271  
Ligonier, PA 15658  
1-800-653-6069

### TABLE OF CONTENTS

**Section I. General Information..... 3**

**Section II. Safety..... 3**

**Section III. Identification of Major Components..... 5**

**Section IV. Setup. .... 5**

**Section V. Operation..... 7**

**Section VI. Maintenance ..... 9**

**Section VII. Inspection Criteria .....10**

**Section VIII. Parts/Drawings.....11**

**Section IX. Warranty .....15**

### RECORD INFORMATION HERE

### FOR REFERENCE

<b>MODEL</b>	
<b>BODY SERIAL NUMBER</b>	
<b>Notes:</b>	



170 State Route 271  
Ligonier, PA 15658  
1-800-653-6069

## Section I. General Information.

May we take this opportunity to thank you for purchasing the Kenco Bin Block Lifter. The Bin Block Lifter provides the ultimate in below the hook Block handling versatility. The Bin Block Lifter is quality engineered to provide years of trouble free, low maintenance performance. **Please read and fully understand this manual and any additional attached documentation before attempting to setup, operate or maintain the Bin Block Lifter system.**

This manual should be made available to all persons who may use or maintain the Bin Block Lifter system. For additional information, please feel free to contact the service department at Kenco at 1-800-653-6069

## Section II. Safety

### A. General

1. Safety practices described in this manual are intended as guidelines for safe operation under most conditions and are supplementary to any and all rules and/or laws governing any aspect of the Kenco Bin Block Lifter operation that are in force in your area.
2. Before operating the Kenco Bin Block Lifter, you should have a clear understanding of said laws and regulations to ensure compliance.
3. Throughout this manual there are parts tagged with one or more of the following safety warnings. Particular care must be exercised with regard to these statements.



This warning is used where there is a high probability of death or serious injury if the instructions are not followed correctly.



This warning is used where there is a possibility of injury to yourself or others if the instructions are not followed correctly.



This warning is used where there is a possibility of damage to the machine if the instructions are not followed correctly.



170 State Route 271  
Ligonier, PA 15658  
1-800-653-6069


## B. Personal Safety

1. Wear appropriate protective clothing and related safety equipment including protective glasses, hardhat, gloves, protective shoes, hearing protection, and any other equipment/devices dictated by job conditions.
2. Do not wear loose clothing, jewelry, or hairstyles that could become entangled in the Kenco Bin Block Lifter or rigging hardware.
3. Keep hands, feet, and any other appendages clear of the Bin Block Lifter while in operation.

## C. Operation Safety.

1. **DO NOT ATTEMPT TO OPERATE OR PERFORM MAINTENANCE ON THE BIN BLOCK LIFTER UNTIL READING AND FULLY UNDERSTANDING THIS MANUAL**
2. **MAINTAIN SAFE DISTANCE FROM LOAD - NEVER ALLOW THE BIN BLOCK LIFTER OR LOAD TO PASS OVER ANY PART OF A PERSON.**
3. **DO NOT USE A KENCO BIN BLOCK LIFTER THAT HAS BEEN ALTERED ACCIDENTALLY OR INTENTIONALLY, IN ANY WAY WITHOUT INSPECTION BY QUALIFIED PERSONNEL.**
4. **DO NOT USE A KENCO BIN BLOCK LIFTER FOR ANY TASK OTHER THAN THE INTENDED PURPOSE OF THE DESIGN.**

### Section III. Identification of Major Components

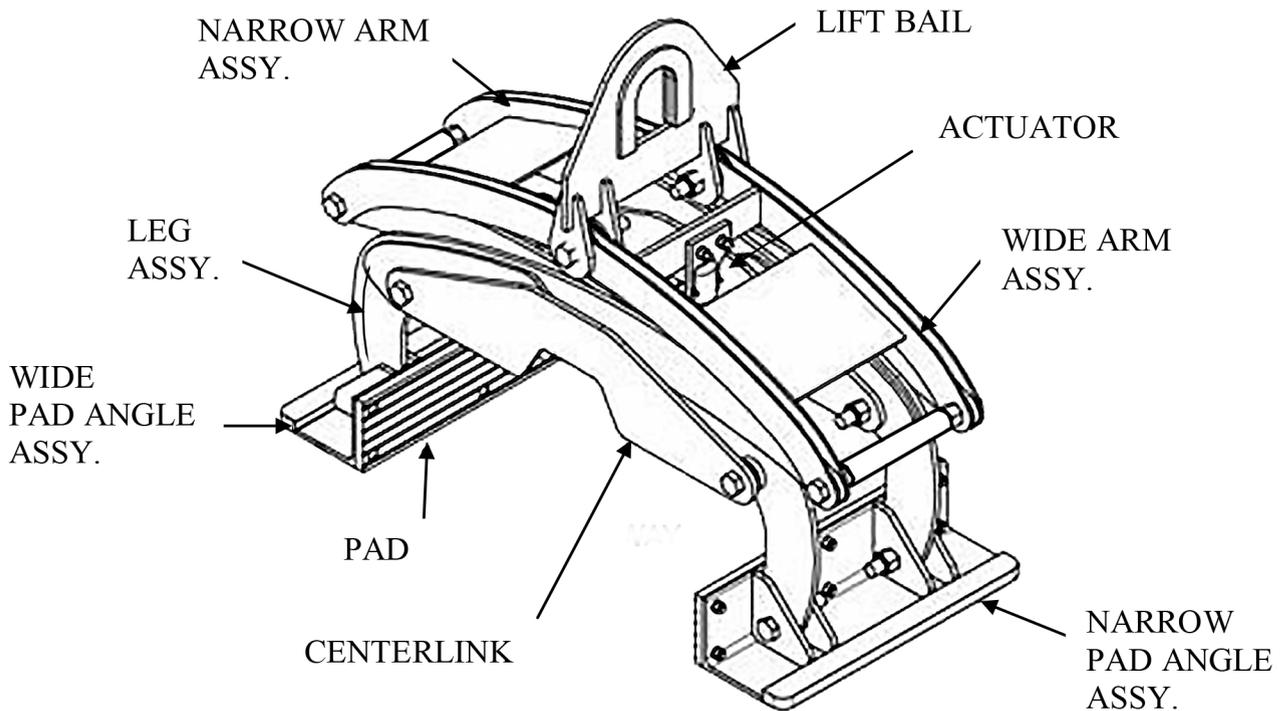

### Section IV. Setup.

- A. Check the Bin Block Lifter for any signs of damage incurred during shipping.
- B. Record model and serial # of assembly and components.
- C. Attach the Bin Block Lifter to hoist.
  1. Use as few rigging components (shackles, slings, chain, etc.) as possible.
  2. **ALL RIGGING COMPONENTS MUST HAVE A WORKING LOAD LIMIT THAT IS EQUAL TO OR GREATER THAN THE COMBINED WEIGHT OF INTENDED LOAD PLUS THE BIN BLOCK LIFTER.**
  3. **UNDER NO CIRCUMSTANCES SHOULD ANY COMPONENT USED AS RIGGING TO THE BINBLOCK LIFTER BE OF A RATED CAPACITY LESS THAN THAT OF THE BIN BLOCK LIFTER.**



170 State Route 271  
Ligonier, PA 15658  
1-800-653-6069

4. **DO NOT RIG UNPROTECTED NYLON SLINGS OR WIRE ROPE DIRECTLY THROUGH LIFT BAIL.**
  
5. **IF USING EQUIPMENT OTHER THAN A CRANE: USE RIGGING OF SUFFICIENT LENGTH TO PREVENT CONTACT BETWEEN BIN BLOCK LIFTER AND EQUIPMENT.**



## Section V. Operation.



Before attempting to use the Bin Block Lifter device **ALWAYS** perform a test lift on the intended object(s) to confirm proper operation. **DO NOT** use a Bin Block Lifter to handle objects beyond the rated capacity or range.



Manipulation of the Bin Block Lifter by ground personnel for the purpose of alignment with load shall only be done with Bin block lifter suspended above the block. **KEEP ALL HANDS AWAY FROM THE BIN BLOCK LIFTER DURING OPERATION.**

### A. Automatic operation:

1. Ensure that the Bin Block Lifter's capacity and range are appropriate to the block to be handled.
2. Position Bin Block Lifter at or near center of object to be lifted.
3. Lower Bin Block Lifter onto object, taking care to minimize impact.
4. Ensure that all persons are clear of Bin Block Lifter and Block.
5. Release tension on lift cable to cycle the actuator.
6. Raise Bin Block Lifter and load in a smooth motion. Do not "jerk".
7. Deposit at desired location.
8. Release tension on lift cable to cycle the actuator. (Note: avoid undue slamming of the Bin Block Lifter into open position to prolong actuator life.)
9. Remove Bin Block Lifter (Bin Block Lift is latched in open position automatically)

*Tip: The majority of wear on the Bin block lifter and associated components results from shock loading, impacting, and poor alignment of the Bin block lifter with the load. Minimizing these incidents will greatly extend the life of the Bin block lifter and consumables.*

### B. Avoid Jarring, swinging, and otherwise unnecessary manipulation of the load.

### C. Avoid handling of loads off center.

### D. DO NOT USE THE BIN BLOCK LIFTER TO PICK MULTIPLES OF ITEMS IN A SINGLE PICK.

### E. Observe all safety practices associated with operation of hoist machinery.



170 State Route 271  
Ligonier, PA 15658  
1-800-653-6069

**F. DO NOT USE BIN BLOCK LIFTER TO DRAG LOADS.**

**G. DO NOT ALLOW LOAD (BLOCK) TO CONTACT ANY SURFACE/OBJECT WHILE BEING HANDLED.**



*The Bin Block Lifter handling device produces grip proportional to and dependent on the weight of the load. It is for this reason that while in operation the Bin Block Lifter and load NEVER be allowed to contact other items.*



## Section VI. Maintenance

### A. Daily:

1. Visually inspect Bin Block Lifter for signs of stress and wear.
2. Check that bolts and nuts are snug.
3. Check that key-way area of the attachment and lift body are properly seated.
4. Ensure free movement of all components.
5. Ensure that all warning labels are present and readable.
6. Check that the actuator mounting screws are snug and seated.
7. Lubricate all moving mechanisms with penetrating oil.
8. **LUBRICATE ACTUATOR WITH LIGHT PENETRATING OIL ONLY (WD40™)**

### B. Annually\*

1. Remove pivot bolts and coat with grease.
2. Inspect holes, pins, bolts etc. for wear. See sect VII for criteria.
3. Remove actuator, clean and lubricate with light penetrating oil – check for signs of wear, replace if necessary.

\* *Frequency depends on usage, environmental conditions, etc.*

## Section VII. Inspection Criteria

**THE BIN BLOCK LIFTER UNIT AND ALL OF ITS ASSOCIATED COMPONENTS SHALL BE REMOVED FROM SERVICE AND TAGGED APPROPRIATELY UNTIL RECERTIFICATION BY A QUALIFIED INDIVIDUAL IN ANY OF THE FOLLOWING CONDITIONS:**


### A. General

1. Cracking in any component or member.
2. Cracking in any weld.
3. Visible distortion in any member.
4. Visible distortion in any Bolt/Pin/Shaft.

### B. Specific

#### 1. Lift Bail

- a. The lift bail shall be replaced if a 20% loss in cross-sectional area from the original member(s) can be demonstrated. Note: cross section of welds, “mushroomed” wear faces, and burrs are not accounted for as cross-sectional area. (See ill.)

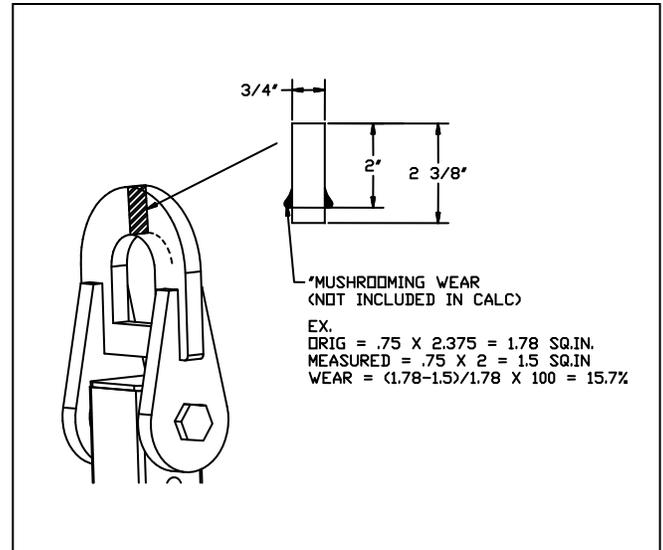

#### 2. Holes.

- a. Any members through which bolted or pinned connections pass shall be replaced if a 10% loss in cross-sectional area from the original member(s) can be demonstrated. Note: cross section of welds, “mushroomed” wear faces, and burrs are not accounted for as cross-sectional area.


#### 3. Pins/Bolts.


- a. Any visible deformation of a pin, shaft or bolt shall require replacement of that part.

#### 4. Pads – Replace if:

- a. For units utilizing urethane gripping pads, if surface of any given mounting bolt is not at least 3/32” below the surface of the pad,.
- b. Any de-lamination of the pad from the backing plate.
- c. Any scarring, chunking, or missing pad material constituting a total combined loss of surface area greater than 3 sq. in. per pad.
- d. Any single scar, chunk, or missing pad face that is greater than 1 sq. in per pad.

## Section VIII. Parts/Drawings

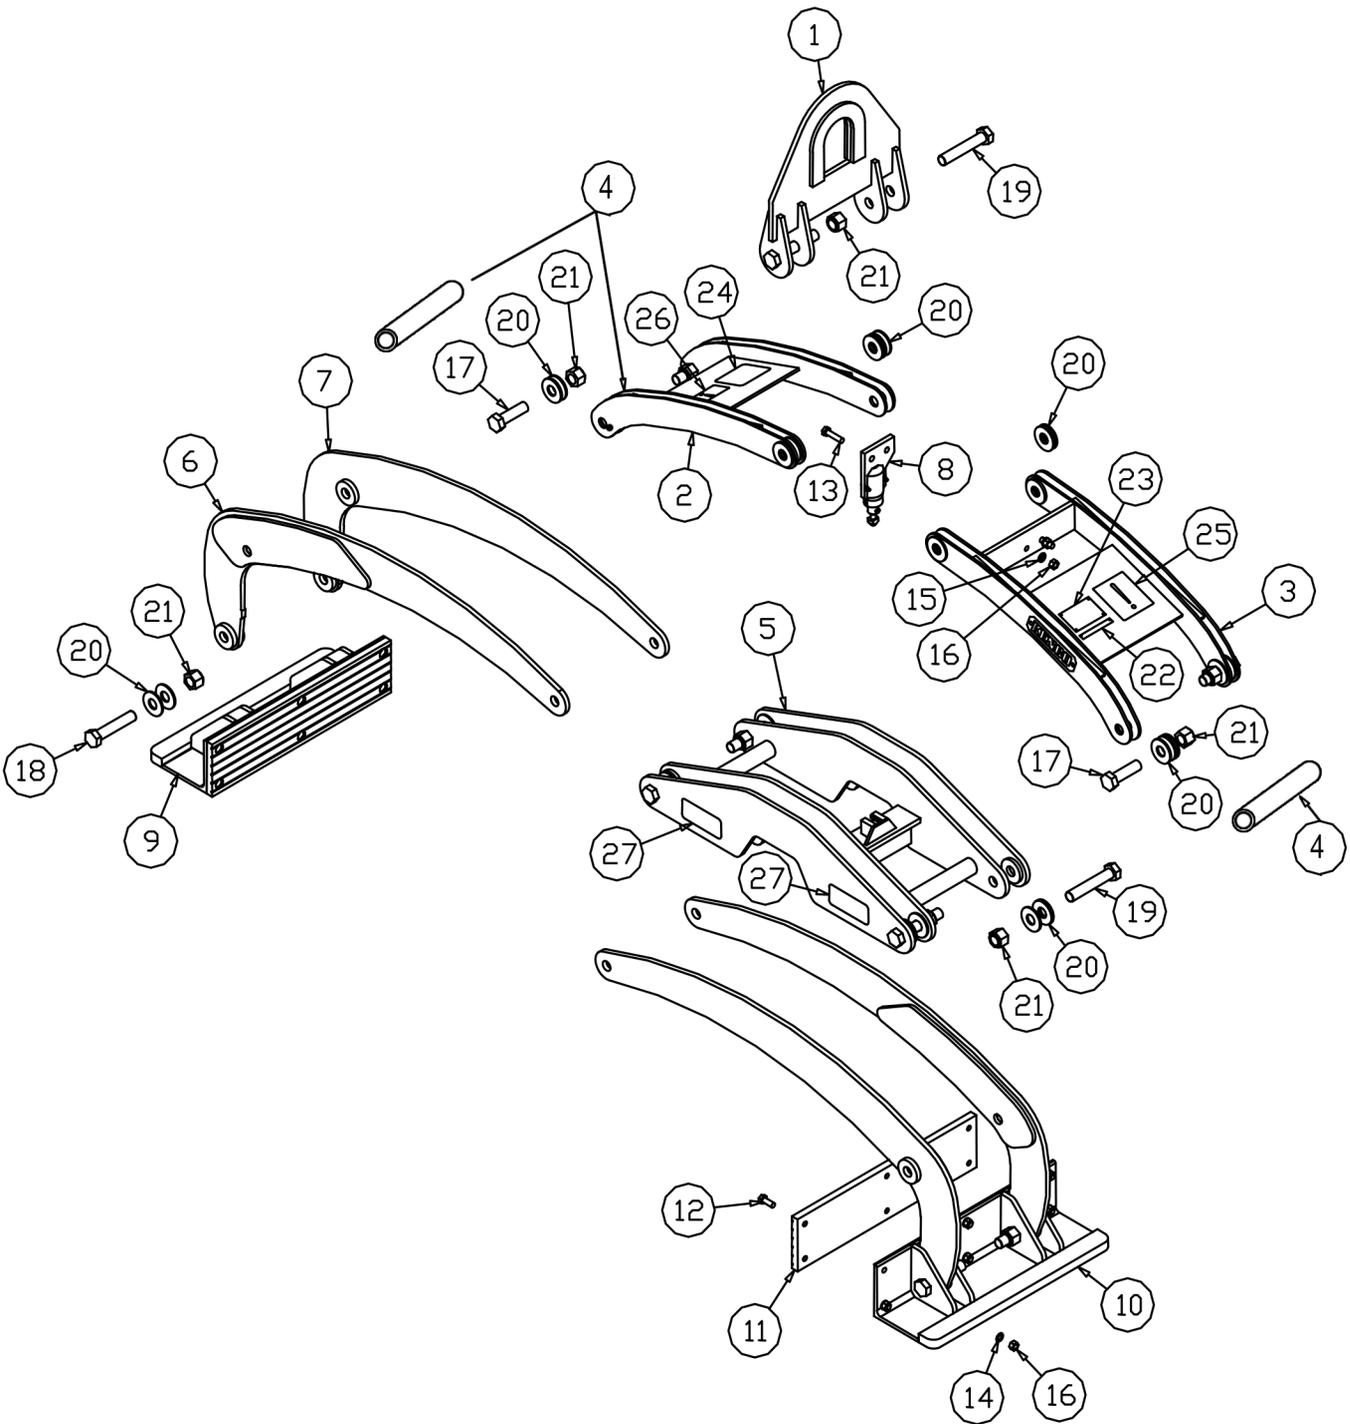

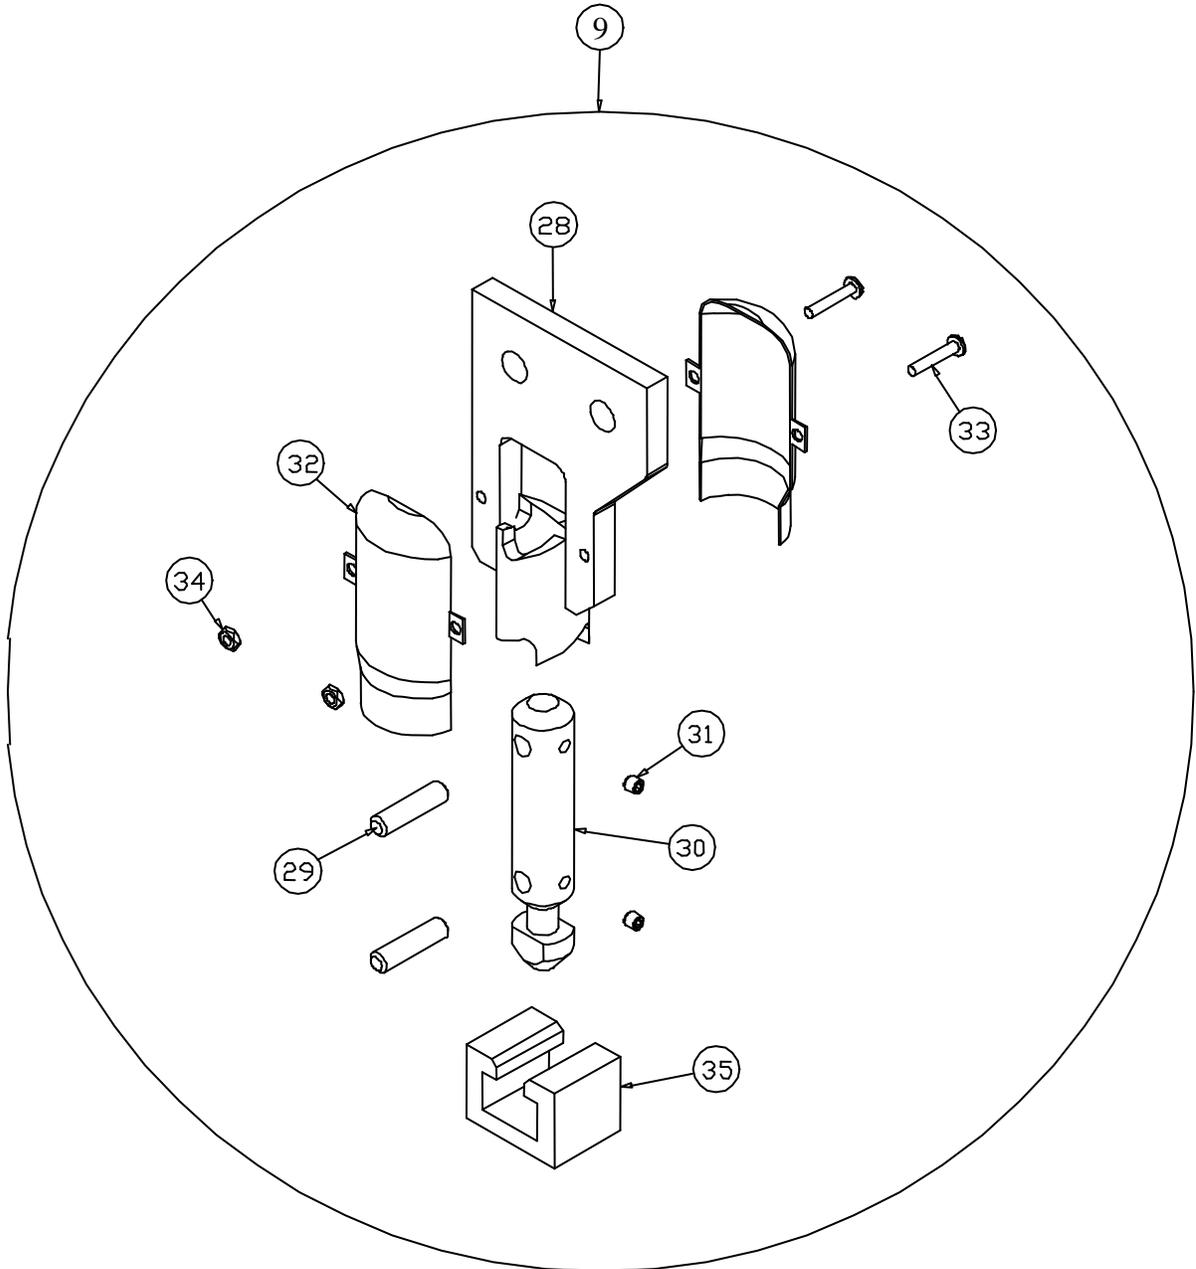

**KENCO CORPORATION**  
**877-4ATTACH**

22  
MODEL **BLK6K24T30**  
USAGE **24" - 30" Bin Block**  
CAPACITY **6000 lbs** WT **600**  
SERIAL NO **SF0000002017**

23  
THIS LIFTER IS DESIGNED TO ASME BTH-1  
DESIGN CATEGORY **B** SERVICE CLASS **3**



24  
**Model:** BLK6K24T30  
**Unit Weight:** 600  
**Capacity:** 6000 lbs  
**Usage:** 24" - 30" Bin Block

170 State Route 271, Ligonier, PA 15658  
www.kenco.com 1-877-4-ATTACH



**WARNING**

25  
**DO NOT** exceed the rated load capacity of the lifter.  
**DO NOT** attempt to operate a malfunctioning or damaged unit.  
**DO NOT** allow unit or load to pass over any part of a person.  
**DO NOT** leave a suspended load unattended.  
**DO NOT** remove or obscure any labels or markings.  
**DO NOT** operate or service without first having read and understood the operating manual.  
**DO NOT** lift loads higher than necessary.  
**DO NOT** alter or modify this equipment.  
**DO NOT** use lifter for other than designated purposes.  
**DO NOT** lift unbalanced loads.  
**DO NOT** allow load to contact other objects while suspended.  
**INSPECT LIFTER PRIOR TO EACH USE.**



**WARNING**



26  
Read and understand operator's manual before using this equipment.  
Failure to follow operating and maintenance procedures could result in death or serious injury.

**DANGER**

27  
**DO NOT STAND UNDER OR NEAR WHILE MACHINE IS OPERATING**

NOTE: MODEL AND SERIAL NUMBER OF LIFTER MUST ACCOMPANY PART ORDERS.

Item Number	Quantity	Part Name
1	1	BLK6K24T30 LIFT EYE ASSY.
2	1	BLK6K24T30 NARROW ARM ASSY.
3	1	BLK6K24T30 WIDE ARM ASSY.
4	2	BLK6K24T30 GRAB BAR
5	2	BLK6K24T30 RIGHT LEG ASSY.
6	1	BLK6K24T30 CENTERLINK COMPLETE ASSY.
7	1	BLK6K24T30 NARROW PAD ANGLE ASSY.
8	1	BLK6K24T30 WIDE PAD ANGLE ASSY.
9	1	MED. ACTUATOR
10	2	BLK6K24T30 LEFT LEG ASSY..
11	2	PAD 6 X 24
12	12	.5 X 1.25 CAPSCREW
13	2	.5 X 2 CAPSCREW
14	12	.5 INTERNAL LOCK WASHER
15	2	.5 LOCK WASHER
16	14	.5 NUT
17	4	1 X 3.5 CAPSCREW
18	4	1 X 5 CAPSCREW
19	6	1 X 5.5 CAPSCREW
20	40	1 FLAT WASHER
21	14	1 NYLOCK NUT
22	1	KENCO ID TAG
23	1	BTH TAG
24	1	KENCO ID STICKER
25	1	LARGE WARNING STICKER
26	1	SMALL WARNING STICKER
27	4	DANGER STICKER
28	1	MEDIUM ACTUATOR BODY
29	2	MEDIUM ACTUATOR PINS
30	1	MEDIUM ACTUATOR SHAFT
31	2	MEDIUM ACTUATOR SET SCREW
32	2	MEDIUM ACTATOR COVER
33	2	MEDIUM ACTUATOR COVER SCREWS
34	2	MEDIUM ACTUATOR COVER NUTS
35	1	MEDIUM RECEIVER BLOCK



## **Section IX.      Warranty**

### **A. Policy**

1. KENCO Corporation (KENCO) warrants the Kenco Bin Block Lifter lifting device (not including pads or consumable items) sold by KENCO to be free from proven defects in material and workmanship for a period of six (6) months from the delivery date to the original customer.
2. Warranty is limited to replacement of parts and/or assemblies, which upon inspection by KENCO are deemed to be defective in material, workmanship, or both.
3. Warranty shall not extend to products that have been altered or repaired in any way without the express written consent of KENCO.
4. Warranty shall not extend to any product that has been misused, abused, or improperly applied or any defect resulting thereof.
5. Defects and corrosion that are the result of improper storage and/or maintenance are not warrantable.
6. Wear items such as Pads, Pins or Lifting bails etc. are not considered for warranty claims.

### **B. Disclaimer**

1. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER REPRESENTATIONS AND WARRANTIES EXPRESSED OR IMPLIED, AND KENCO EXPLICITLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTY OF MERCHANTABILITY FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL THE END USER BE ENTITLED TO ANY CONSEQUENTIAL, INCIDENTAL OR CONTINGENT DAMAGES OF ANY KIND ARISING OUT OF BREACH OF CONTRACT, WARRANTY (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES OF LAW, WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY KENCO, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.